 



QV1 Apartments Operating Instructions for the BPT Audio Video Intercom System

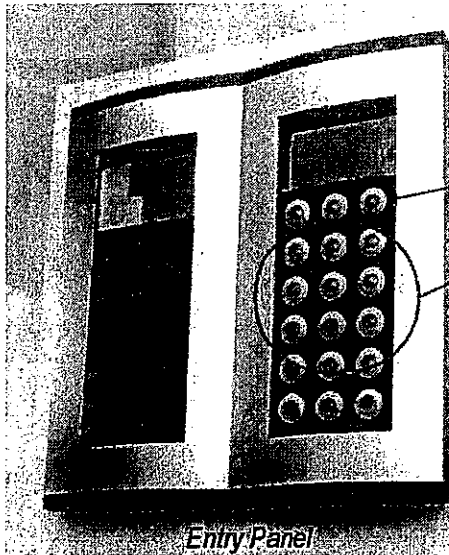

 
Entry Panel

Lobby Entry Panel
 To call an apartment from this panel - dial the apartment number then press the  (bell) button

 


Your visitors can call your apartment from a call panel located at the building entrances. When called, the system will transmit an electronic tone to your apartment video intercom monitor.

Your monitor has a protective screen cover which can be removed for cleaning purposes.

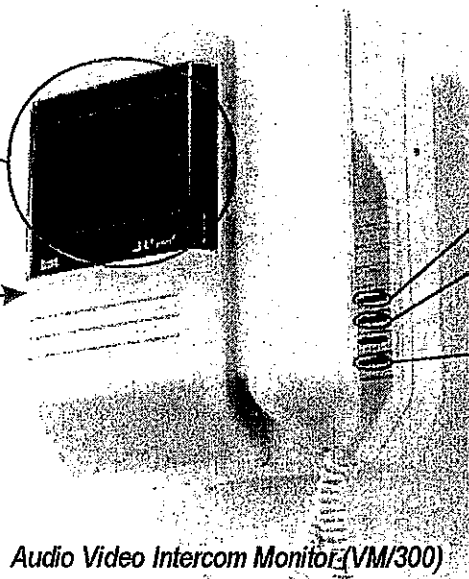The monitor brightness can be adjusted by the left side rotary wheel. This wheel will also turn the monitor off if turned fully anti-clockwise.



Audio Video Intercom Monitor (VM/300)

- Entry Panel activation 
- Lift Release/desecure 
- Door Release Control 

Your audio video intercom monitor will automatically become active when a call is transmitted to your apartment. You may answer the call by lifting the handset. To grant your visitor access into the building, press the **Door Release Control** button (button with the key symbol). This function will unlock the door for approx. 5 secs. To grant your visitor access to your apartment level via the lift car/s then press the **Lift Release** button (button with the 'L' symbol beside it). This function will de-secure the lift car/s for a pre-determined delay.